

Register your product and get support at www.philips.com/welcome



EN	User manual	LV	Lietošotāja rokasgrāmata
BG	Руководство за ползване	PL	Instrukcja obsługi
CS	Příruční pro uživatele	RO	Manual de utilizare
ET	Kasutjuhend	RU	Руководство по эксплуатации
HR	Korisnički priručnik	SK	Príručník používateľa
HU	Felhasználói kézikönyv	SL	Uporabniški priročnik
KK	Қолданушының нұсқасы	SR	Korisnički priručnik
LT	Vartotojo vadovas	UK	Посібник користувача

PHILIPS



Specifications are subject to change without notice © 2014 Koninklijke Philips N.V. All rights reserved.

3140 035 39211

Read this user manual carefully before you use the appliance and keep it for future reference.

WARNING: Do not use this appliance near water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

Always unplug the appliance after use.

If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.

If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.

Do not insert metal objects into the air grilles to avoid electric shock.

Never block the air grilles.

Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

Do not use the appliance for any other purpose than described in this manual.

Do not use the appliance on artificial hair.

When the appliance is switched on, the power never leave it unattended.

Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

Do not wind the mains cord around the appliance.

Wait until the appliance has cooled down before you store it.

Note: Ldc = 81 dB (A)

Electromagnetic fields (EMF)

The Philips appliance complies with applicable standards and regulations regarding exposure to electromagnetic fields.

Environment

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EU.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local laws and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

2 Before styling your hair

Note: Always let the appliance and attachments cool down before you connect or disconnect the attachments.

1 Dry your wet hair with a clean towel first as the appliance is most effective on towel-dry hair.

2 Snap a suitable attachment onto the handle (1) in Fig. 1 with the grooves aligned (2) in Fig. 3.

* You will hear a "click", and the attachment is locked in place. To release a suitable attachment for the hairstyle you want, please refer to the table below.

Hairstyle	Attachment
Dry hair	Nozzle (1) (HPR661, HPR662, HPR663 only)
Create loose curls	Relaxable bristle brush (1) (HPR662, HPR663 only)
Create natural straight hair	Paddle brush (1) (HPR663 only)
Create inward/outward flicks and natural waves	38mm Thermohair (1) (HPR661 only)
	22mm Thermohair (1) (HPR661 only)

3 Style your hair

1 Connect the plug to a power supply socket.

2 Plug the appliance into the power and warm airflow (2) in Fig. 1 for fast drying and styling. Thermohair setting (2) for gentle airflow to prevent your hair from overheating.

3 Only for HPR661, HPR662, HPR663: You can also select cool airflow (3) for long your hair style.

* Only for HPR661, HPR662, HPR663: Ions are automatically and continuously dispersed to provide additional shine and reducing frizz when the appliance is powered on.

Dry your hair (HPR661, HPR662, HPR663 only)

1 Select the nozzle (1) in Fig. 1 and attach it to the handle (2) in Fig. 1.

2 Dry your hair with suitable airflow settings (1) in Fig. 1.

Create loose curls (Fig. 4, HPR662, HPR663 only)

1 Turn the knob (1) in Fig. 1 to extract the bristles.

2 Wind a section of hair round the brush with the bristles extended (2) in Fig. 1.

3 Turn the knob (1) in Fig. 1 to retract the bristles and remove the brush from your hair.

4 Repeat steps 2-4 to the rest of your hair.

5 When finished, turn your curled hair around your fingers to define your curls.

6 Turn your curls as you like to get your desired look.

7 Apply hairspray to your hair for long lasting results.

Create natural straight hair (Fig. 5, HPR663 only)

1 Put the paddle brush (1) in Fig. 5 on your hair.

2 Brush through your hair slowly with the paddle brush, just like how you would with a normal brush.

3 Brush your hair backward as you like.

4 Brush your hair underneath your hair to give more movement to your hair.

5 When finished, use your fingers to shape your hair.



