

Register your product and get support at [www.philips.com/welcome](http://www.philips.com/welcome)



EN	User manual	LV	Lietuvaišis raktažymāta
BG	Руководство за ползване	PL	Instrukcja obsługi
CS	Přiručka pro uživatele	RO	Manual de utilizare
ET	Kasutajuhend	RU	Руководство по эксплуатации
HR	Korisnički priručnik	SK	Priručník uživateľa
HU	Felhasználói kézikönyv	SL	Uporabniški priročnik
KK	Қолданушының нұсқасы	SR	Korisnički priručnik
LT	Vartotojo vadovas	UK	Посібник користувача

**PHILIPS**



Specifications are subject to change without notice  
© 2014 Koninklijke Philips N.V.  
All rights reserved.

3140 035 39211

**English**  
Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

**1 Important**  
Read this user manual carefully before you use the appliance and keep it for future reference.

- WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance as artificial hair.
- When the appliance is unplugged, ensure that the power never leave it unattended.
- Do not wind the mains cord around the appliance.
- Wait until the appliance has cooled down before you store it.

**Electromagnetic fields (EMF)**  
The Philips appliance complies with applicable standards and regulations regarding exposure to electromagnetic fields.

**Environment**  
Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

**2 Before styling your hair**  
Note: Always let the appliance and attachments cool down before you connect or disconnect the attachments.

- 1 Dry your wet hair with a clean towel first as the appliance is most effective on towel-dry hair.
- 2 Plug a suitable attachment onto the handle (ⓐ in Fig.1) with the brushes aligned (ⓑ in Fig.3).
- 3 You will hear a "click", and the attachment is locked in place. To release a suitable attachment for the hairstyle you want, please refer to the table below.

Hairstyle	Attachment
Dry hair	Nozzle (ⓑ) (HP8661, HP8662, HP8663 only)
Create loose curls	Relaxable bristle brush (ⓑ) (HP8662, HP8663 only)
Create natural straight hair	Paddle brush (ⓑ) (HP8663 only)
Create inward/outward flicks and natural waves	38mm Thermohair (ⓑ) (HP8661 only)
	22mm Thermohair (ⓑ) (HP8661 only)

**3 Style your hair**

- 1 Connect the plug to a power supply socket.
- 2 Plug the airflow nozzle (ⓐ in Fig.1) to strong and warm airflow.
- 3 For fast drying and styling, Thermohair setting (ⓐ) for gentle airflow to prevent your hair from overheating.
- 4 Only for HP8661, HP8662, HP8663 you can also select cool airflow (ⓑ) for long your hair style.
- 5 Only for HP8662, HP8663 ions are automatically and continuously dispersed to provide additional shine and reducing frizz when the appliance is powered on.

- 1 Turn the knob (ⓑ in Fig.1) of the retractable bristle brush (ⓑ) in (Fig.1) to retract the bristles.
- 2 Wind a section of hair round the brush with the bristles extended.
- 3 Keep the brush in the position for 7 to 10 seconds.
- 4 Turn the knob (ⓑ in Fig.1) to retract the bristles and remove the brush from your hair.
- 5 Repeat steps 2-4 to the rest of your hair.
- 6 When finished, turn your curled hair around your fingers to define your curls.
- 7 Use your curls as you like to get your desired look.
- 8 Apply hair spray to your hair for long lasting results.
- 9 Create natural straight hair (Fig.5 in Fig.1) on your hair.
- 10 Brush straight hair slowly with the paddle brush, just like how you would with a normal brush.
- 11 Brush your hair backward as you like.
- 12 You may brush underneath your hair to give more movement to your hair.
- 13 When finished, use your fingers to shape your hair.





