

# GoldStar

"Please visit our web page  
for other product information.  
<http://www.lgeus.com>"

## Automatic Breadmaker INSTRUCTIONS & COOKING GUIDE

MODEL : HB-152CE



**PLEASE READ THESE INSTRUCTIONS  
THOROUGHLY AND CAREFULLY  
BEFORE OPERATING THIS BREADMAKER**

# TABLE OF CONTENTS

---

<b>IMPORTANT SAFEGUARDS</b> .....	3
<b>BEFORE YOUR FIRST USE</b> .....	4
<b>SPECIFICATIONS</b> .....	4
<b>BREAD MACHINE INTRODUCTION</b> .....	5
• Parts .....	5
• Control Panel.....	5
• Program Specifications.....	6
<b>CLEANING INSTRUCTIONS</b> .....	7
<b>INGREDIENTS</b> .....	8
<b>OPERATION</b> .....	9
• Programming Bread .....	9
• Programming Dough .....	10
• Programming Cake.....	10
• Programming The Delay Timer (Bread or Dough).....	11
• Baking Control (Bread).....	11
<b>BEFORE CALLING FOR SERVICE</b> .....	12
• Questions and Answers.....	12
• Check List.....	13
<b>COOKING GUIDE</b> .....	14

# IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. **Read all instructions before using this appliance.**
2. To protect against electric shock do not immerse cord, plug, or appliance in water or other liquid (see instructions for cleaning).
3. Do not touch hot surfaces. Always use oven mitts when handling the hot bread pan or bread.
4. Close supervision is necessary when this appliance is used near children.
5. This appliance is not for use by children. Keep out of reach of children.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before attaching or removing parts.
7. Avoid touching moving parts. Do not remove the bread pan or insert hand into the bread pan during operation. Stop pad must be pressed if bread pan is to be removed before completion.
8. Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, electrical or mechanical adjustment.
9. Do not use outdoors or while standing in damp area.
10. Do not cord hang over edge of table or counter or touch hot surfaces.
11. Do not place on or near hot gas or electric burner or in a heated oven.
12. To unplug with unit switched off, grip the plug and pull out from the wall outlet. Never pull on the cord.
13. Do not use appliance for other than intended use.
14. This product is intended for household use only.
15. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical, creating a risk of electrical shock.
16. Bread machine must be placed at least 4 inches (10.2 cm) from walls and edge of counter.
17. Do not cover bread machine with anything which would prevent the steam escaping. This may cause warpage, discoloration, malfunction or even fire.

## SAVE THESE INSTRUCTIONS

THIS PRODUCT FOR HOUSEHOLD USE ONLY.

**CAUTION** : A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125 V, and at least 13 A., 1625 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

**ELECTRIC POWER** : If electric circuit is overloaded with other appliances, your bread machine may not operate properly. The bread machine should be operated on a separate electrical circuit from other operating appliances.

**POLARIZED PLUG** : This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!