 


SENCOR®

SMR 601

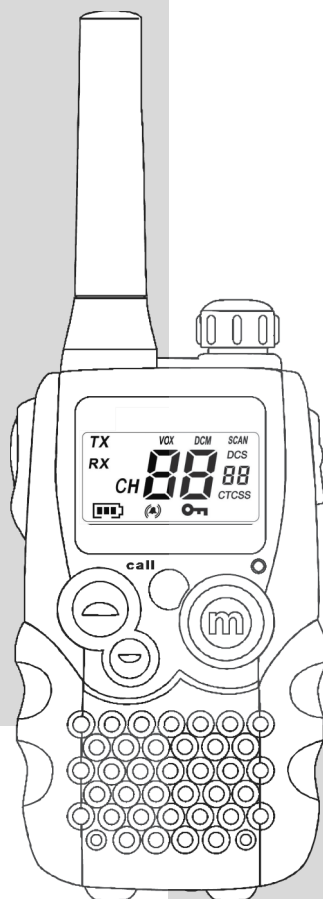

USER GUIDE

UŽIVATELSKÁ PŘÍRUČKA

UŽIVATEĽSKÁ PRÍRUČKA

FELHASZNÁLÓI KÉZIKÖNYV

INSTRUKCJA OBSŁUGI

PRIRUČNIK ZA UPOTREBU

UPUTSTVO ZA UPOTREBU

ΕΓΧΕΙΡΙΔΙΟ ΟΔΗΓΙΩΝ

**PRIVATE MOBILE RADIO
WITH TWIN CHARGER**

**OSOBNÍ MOBILNÍ RADIOSTANICE S DUÁLNÍ
NABÍJECÍ ZÁKLADNOU**

**OSOBNÁ MOBILNÁ RÁDIOSTANICA SO
DVOJITOU NABÍJACOU ZÁKLADŇOU**

**SZEMÉLYI MOBIL RÁDIOÁLLOMÁS KETTŐS
TÖLTŐEGYSÉGGEL**

**OSOBISTA RADIOSTACJA PRZENOŚNA
Z PODWÓJNĄ BAZĄ ŁADUJĄCĄ**

**PRIVATNI MOBILNI RADIO S DVOSTRUKIM
PUNJAČEM**

**LIČNI TOKI VOKI SA DVOSTRUKIM
PUNJAČEM**

**ΦΟΡΗΤΟ ΡΑΔΙΟΣΥΣΤΗΜΑ ΙΔΙΩΤΙΚΗΣ ΧΡΗΣΗΣ
"ΓΟΥΟΚΙ ΤΟΚΙ" ΜΕ ΔΙΠΛΟ ΦΟΡΤΙΣΤΗ**

EN

CZ

SK

HU

 
PL

HR


SRL

EL

USER GUIDE

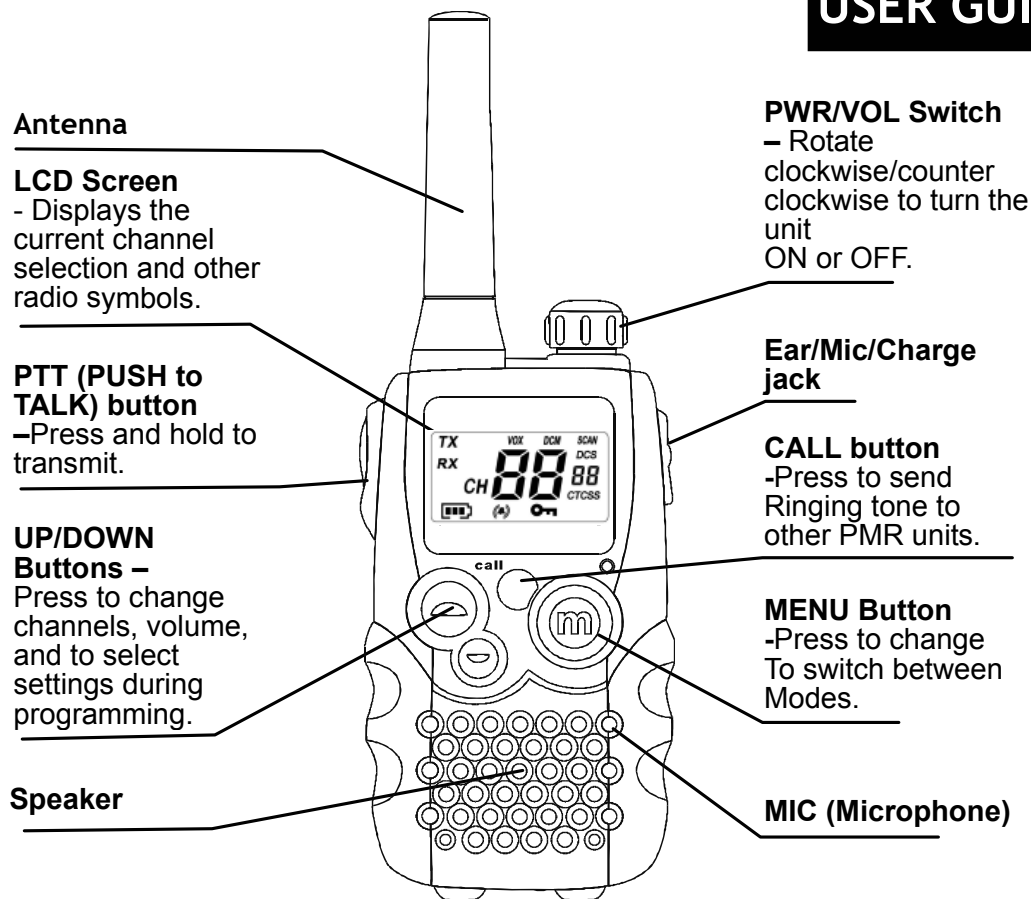

 1. LCD Screen

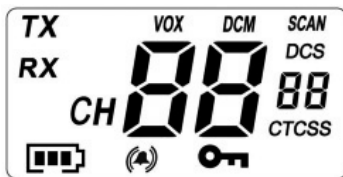

88 Channel Number. Changes from 1 to 16 as selected by the user.

88 CTCSS Code. Changes from 1 to 38 as selected by the user.

|||| Displays the Battery charge level. When the bars are reduced, the battery needs recharging.

- TX** Displayed when transmitting a signal.

- RX** Displayed when receiving a signal.

- DCM** Displayed when the Dual Watch function is turned ON.

- DCS** Displayed when the Digital Code System is turned On.

- VOX** Displayed when the VOX feature is enabled.

- SCAN** Displays when the PMR is scanning all channels.

- 🔒** Displayed when the Key Lock feature is activated.

- ||||** Displays the current Speaker volume level.

- 📞** Displays when the call signal is ON.

- 🔊** Displays when the vibrator function is activated.

2. Installation

2.1 Removing the Belt Clip

- Pull the Belt Clip latch forward (away from the SMR 601)
- While pulling the Belt Clip latch, push up the Belt Clip as shown in Figure 1.

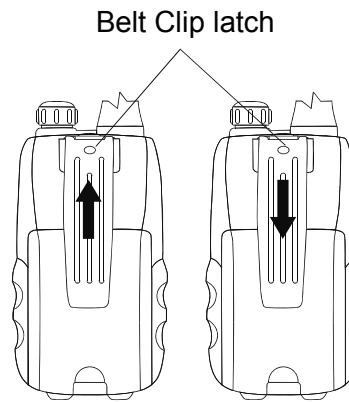 


Figure 1

Figure 2

2.2 Installing the Belt Clip

- Slide the Belt Clip into the slot as shown in Figure 2. A “click” indicates the Belt Clip is locked into position.

2.3 Installing the Battery pack

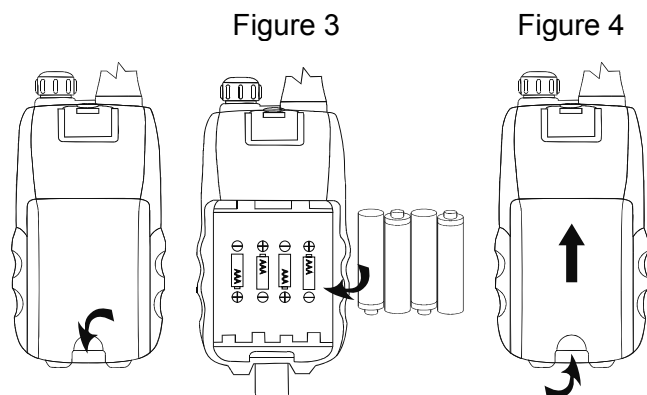 


Figure 3

Figure 4

Caution: Observe the proper battery polarity orientation when installing batteries. Incorrect positioning can damage both the batteries and the unit.

- Slide down the Battery Compartment Cover.
- Install the rechargeable battery pack by following the orientation as shown in Figure 3 (the arrow is showing and pointing upward.)
- Replace the Battery Compartment Cover. See Figure 4.

Important

Read these Safety Warnings before you charge the batteries.

When placing the unit in the charger, **use only the power supplies listed in the user instructions supplied with the SMR 601.**

Don't try to recharge non-rechargeable batteries.

Make sure the battery compartment cover is securely locked in place when you are charging the batteries.

Dispose of used batteries safely and in a way that will not harm the environment—never try to burn them or put them anywhere, they could get burnt or punctured.

Don't leave dead batteries in your units.

They might leak if you do.

2.4 Charging the battery batteries

- Insert the small plug on the end of the mains adaptor into the Power-in Connection Jack at the back of the desktop charger.
- Plug the mains adaptor into a 230V AC, 50Hz main socket with the switch on the socket set to OFF.
- Switch ON the main socket.

The SMR 601 must be charged using the mains adaptor provided. Using any other adaptor will result in non-compliance with EN62368-1 and will invalidate any approvals & warranty.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!