



SLO

GARANCIJSKA IZJAVA

1. Garancijski rok se prične z dnevom izročitve in traja 24 mesecev.
2. EMOS SI, d.o.o. jamči kupcu, da bo v garancijskem roku na lastne stroške odpravil vse pomanjkljivosti na aparatu zaradi tovarniške napake v materialu ali izdelavi- oz. zamenjal proizvod.
3. Za čas popravila se garancijski rok podaljša.
4. Če aparat ni popravljen v roku 45 dni od dneva prijave okvare, lahko prizadeta stranka zahteva novega ali vračilo plačanega zneska.
5. Garancija preneha, če je okvara nastala zaradi:
 - predelava brez odobritve proizvajalca
 - neupoštevanje navodil za uporabo aparata.
6. Naravna obraba aparata je izključena iz garancijske obveznosti. Isto velja tudi za poškodbe zaradi nepravilne uporabe ali preobremenitev.

NAVODILA ZA REKLAMACIJSKI POSTOPEK

Lastnik uveljavlja garancijski zahtevek tako, da ugotovljeni okvaro prijavi pooblaščeni delavnici (EMOS SI, d.o.o., Kidričeva 38, 3000 Celje) pisno. Kupec je odgovoren, če s prepozno prijavo povzroči škodo na aparatu. Po izteku garancijskega roka preneha pravica do uveljavljanja garancijskega zahteveka. Priložen mora biti original potrjen račun in potrjen garancijski list.

EMOS SI, d.o.o., se obvezuje, da bo aparat zamenjal z novim, če ta v tem garancijskem roku nebi deloval brezhibno.

ZNAMKA: _____ BREZŽIČNI TERMOMETER Z BARVNIM ZASLONOM

TIP: _____ W159

DATUM PRODAJE: _____

Servis: EMOS SI, d.o.o., Kidričeva 38, 3000 Celje; tel. +386-8-205 17 20

PROHLÁŠENÍ O SHODĚ	
My	EMOS spol. s r. o. Šífava 295/17 750 00 Přerov 1 - Město Česká republika IČO: 190 14 104, DIČ CZ 190 14 104
tímto prohlašujeme	
že následně označené zařízení na základě jeho koncepcie a konstrukce, stejně jako nám do oběhu uvedené provedení, je ve shodě s základními požadavky a dalšími příslušnými ustanoveními nařízení vlády č. 426/2000 Sb., v platnému znění a směrnice 1999/5/ES. Při nám neodsohlasených změnách zařízení ztrácí toto prohlášení svou platnost.	
Výrobek:	BEZDRÁTOVÝ TEPLOMĚR
Typ:	W159
Pásmo pracovního kmitočtu: 433,92 MHz	
Výrobce:	Ansen Electronics Company, Rm 73-78, 2/F, Sino Ind. Plaza, 9 KaiCheung Road, Kowloon Bay, Hong Kong
Účel použití: Výrobek je určen pro měření teploty	
Výše uvedený výrobek je ve shodě s normami: Radiové parametry: ČSN ETSI EN 300 220 – 1 V1.3.1:01, ČSN ETSI EN 300 220 – 3 V 1.1.1:01	
EMC:	ČSN ETS 301 489-1 V1.4.1:2003, ČSN ETS 301 489-3 V1.3.1:2002
El.bezpečnost	ČSN EN 60065: 03 a nařízeními vlády č. 426/2000 Sb. v platném znění
Výrobek je za podmínek ověrytího a určeného použití bezpečný	
Umístění CE na výrobku: 07	
Místo vydání:	V Přerově
Datum vydání:	12.2.2007
Jméno:	Lupač Jiří
Funkce:	jednatel

W159

GB

LONG RANGE WIRELESS COLOR THERMO-HYGROMETER

CZ

BEZDRÁTOVÝ TEPLOMĚR S BAREVNÝM displejem

SK

BEZDRÔTOVÝ TEPLOMER S FAREBNÝM displejom

PL

TERMOMETR Z KOLOROWYM Wyświetlaczem

H

VEZETÉK NÉLKÜLI HŐMÉRŐ SZÍNES KIJELZŐVEL

SLO

BREZŽIČNI TERMOMETER Z BARVNIM ZASLONOM

D

DRAHTLOSES THERMOMETER MIT FARBIGEM DISPLAY

UA

БЕЗДРОТОВИЙ ТЕРМОМЕТР З КОЛЬОРОВИМ ДИСПЛЕЄМ

RO

TERMOMETRU FĂRĂ FIR CU ECRAN COLOR



GB LONG RANGE WIRELESS COLOR THERMO-HYGROMETER

Thank you for purchasing the new generation color weather station. Designed and engineered with the state-of-art technology and components, this instrument will provide accurate and reliable measurement of in/ out humidity, temperature, heat index, dew point as well as moon phase and radio-controlled clock. Read this manual carefully to fully explore the features and functions of the new product.

Specifications

Range of temperature measurement:	
Indoor unit:	0°C to + 50°C (+32 F to +122 F)
Remote sensor:	-20°C to +60°C (-4 F to +140 F)
Indoor/Outdoor:	20% - 99% RH
Resolution:	0.1 degree C for temperature, 1% for humidity
Channel:	max. 3 remote sensors
Transmission:	up to 30m (246 ft.) in open area, RF 433MHz
Clock:	DCF77 Radio-Controlled, Quartz back-up
Power:	4.5V adapter & AAA x 3 pcs for main unit AAA x 2 pcs for remote sensor

Battery & adapter installation

Home Receiver Unit:

Main Power Source: Plug in the 4.5V adapter into the adapter socket at the back for basic operation and continuous backlight.

Backup Power: Lift off the battery cover, install 3 pieces of AAA backup batteries according to the polarity indicated, close the battery cover.

Remote Sensor:

Lift off the bracket stand, loosen the 2 screws with a small screwdriver, insert 2 pieces of AAA batteries according to the polarity indicated. Replace the cover and tighten the 2 screws.

Setting up the wireless thermo-hygrometer

- For the first installation, always turn on the home unit first and then the remote sensor. Set Channel 1 for the first remote sensor. Set channel 2 and channel 3 for the 2nd and 3rd sensor.
- Press the Tx button on the back of remote sensor to transmit RF signal.
- Press and hold CHANNEL button on main unit to search for remote sensor. When RF connection is established, the respective temperature & humidity of the selected channel will appear on the main unit.

Radio-controlled clock

The unit will start synchronizing the clock after battery/adapter installation or reset. In normal mode, press to enforce searching of radio-controlled clock signal. The antenna icon will appear during synchronization, if the icon disappear afterwards, radio time signal is not available at the moment. Try other locations later. Place the unit away from source of interference such as mobile phones, appliances, TV etc. Antenna icon with full signal strength will appear on screen if the reception of radio-controlled time is successful. The radio-controlled clock will have a daily synchronization at 02:03 and 3:03 everyday. Each reception cycle is minimum 2.5 minutes and maximum 10 minutes.

In/out temperature & humidity

Temperature reading is located on the lower left of the display and humidity is on the lower right.

Press "C/F" button to select temperature unit C/ F.

Press CHANNEL/SEARCH button to select indoor, Ch1, Ch2, Ch3 and auto-channel scrolling display modes.

In/out heat index

Heat Index combines the effects of heat and humidity. It is the apparent temperature of how hot the heat-humidity combination makes it feels.

Press "Heat Index/Dew Point" button once to show the respective indoor or outdoor heat index on the lower left display. "HEAT INDEX" icon will appear.

Name and Functions of Buttons

	Press Functions	Hold 3 seconds
CLOCK	Read time, calendar and day-of-week	Set Clock & Calendar
ALARM	Read alarm time, enable/disable alarm	Alarm time setting
▲ UP	1 step forward in setting	Fast advance
▼ DOWN	1 step backward in setting	Fast backward
CHANNEL	Select indoor, Channel 1,2,3, auto scroll	Search for remote sensor
MEMORY	Read max/min temperatures & humidity	Clear memory record
HEAT INDEX/DEW POINT	Read Heat Index & Dew Point	
SNOOZE/LIGHT	Trigger snooze alarm, extend backlight	
ZONE	Toggle RC time & Zone time	Zone time & DST setting
C/F	Toggle degree C & F unit	
	Search for Radio-Controlled time	
RESET	System reset	

In/out heat index alert indicator

Heat index alert indicators of the respective indoor or outdoor channels

Caution	Exercise more fatiguing than usual
Extreme caution	Heat cramps, exhaustion possible
Danger	Heat exhaustion likely
Extreme danger	Heat stroke imminent

In/out dew point

Dew point is the saturation point of the air, or the temperature to which the air has to be cooled in order to get condensation. In normal mode, press HEAT INDEX / DEW POINT button twice to show the respective indoor or outdoor dew point reading on the lower left display. "DEW POINT" icon will appear.

In/out comfort level

In/Out Comfort indicator combines the effect of temperature & humidity and displays in 3 levels:

"COMF":	Comfortable level, ideal range for both temperature & humidity
WET:	Contain excess moisture
DRY:	Contain inadequate moisture

Color bar graphs

The color graphs are designed as an intuitive way to gauge the weather at a glance. The left color bar graph represents the respective In/Out temperature, heat index or dew point of the current display mode. The right graph represents the respective In/Out humidity. As the measurements change, the number of illuminated bars changes automatically.

Maximum / minimum memory

Press MEMORY button repeatedly to view the maximum & minimum values of temperature, humidity, heat index or dew point readings. To clear the memory record, hold MEMORY button while the respective values are displaying on screen.

Temperature & humidity trend indicator

The icons will indicate Rising, Steady, Falling if the temperature or humidity change is more than 1 degree within an hour.

Clock & calendar

Press "CLOCK" to toggle display between time, calendar and day of the week.

Hold "CLOCK" button to enter clock setting mode. Using ▲ or ▼ to adjust and "CLOCK" to confirm, the following values can be set in sequence:
12/24hr format > Hr > Min > Yr > D/M or M/D format > Month > Date > EXIT

Moon phase

Moon phase will be displayed automatically according to current calendar.

Home time, world (zone) time

Press "ZONE" button to toggle between home (radio-controlled) time and world (zone) time. "ZONE" icon appears when world (zone) time is selected.

Hold "ZONE" to enter world (zone) time setting mode. Press ▲ or ▼ to enter the desired hour offset value from -12 to +12 hours. Press "ZONE" to confirm each setting.

Alarm setting

Press "ALARM" to show alarm time and "AL." icon will appear. Press again to enable or disable the alarm. Bell icon appears when alarm is enabled.

solare directe, iar aerul înconjurător să poată circula liber. Înainte de fixare verifică raza de acțiune efectivă a senzorului. Nu amplasă senzorul pe materiale care ar putea diminua raza de acțiune a emisiei. Raza de acțiune a semnalului senzorului de exterior se reduce sub influența materialelor de construcție folosite și interferențelor electromagnetice aflate pe traseul transmisiei.

Întrebări și răspunsuri

Produsul este proiectat astfel, ca la o manipulare adecvată să funcționeze ani îndelungăti, îată câteva recomandări pentru o manipulare corectă:

- Nu expuneți produsul la presiune excesivă, izbituri, praf, temperatură sau umiditate extremă, întrucât ar putea provoca defectarea funcionalității produsului, scurțarea autonomiei energetice, deteriorarea baterilor și deformarea componentelor de plastic.
- Nu interveniți la circuitele electrice interne ale produsului – aceasta ar putea provoca deteriorarea lui și încetarea automată a valabilității garanției. Produsul trebuie reparat doar de un specialist calificat.

Emos s.r.o. declară că W159 este în conformitate cu cerințele de bază și alte prevederi ale directivei 1999/5/ES. Aparatul poate fi utilizat liber în UE. Declarația de conformitate este parte integrantă a instrucțiunilor sau se poate găsi pe paginile www.emos.eu

Adaos

	Apăsarea butonului	Tinerea butonului (3 secunde)
CLOCK	Afișarea orei și datei	Reglarea orei și calendarului
ALARM	Afișarea alarmei, pornit și opri	Reglarea alarmei
▲ UP	1 pas înainte la reglare	Înaintare rapidă la reglare
▼ DOWN	1 pas înapoi la reglare	Mers rapid înapoi
CHANNEL	Comutare între date interioare și exterioare, autocomutare	Detectarea senzorului
MEMORY	Afișarea temperaturii min. și max.	Resetarea memoriei
HEAT INDEX/DEW POINT	Afișarea indicelui de confort termic și a punctului de rouă	
SNOOZE/LIGHT	Pornește alarmă repetată și lumina de fond a ecranului	
ZONE	Comutarea orei OR și a zonei orare	
C/F	Comutarea unității de temperatură	
	Detectarea semnalului dirijat pînă radio	
RESET	Resetarea aparatului	

Notă: Butoanele ZONE, C/F, și RESET sunt amplasate în partea din spate sub capacul bateriilor.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přizívají na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!