 


# Panasonic®

Operating Instructions  
Instrukcja obsługi  
Návod k obsluze

Active Speaker System  
System Głośników Aktywnych  
Aktivní reproduktorový systém

Model No. SC-CMAX5

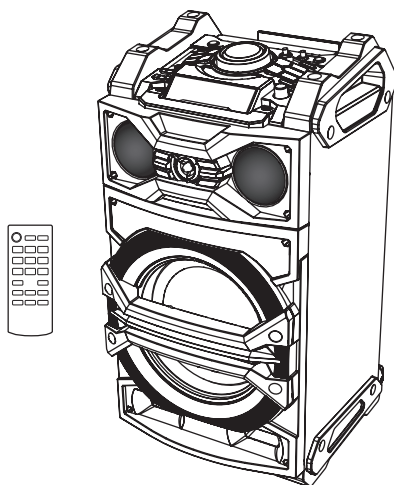

Thank you for purchasing this product.  
Please read these instructions carefully before  
using this product, and save this manual for  
future use.

Dziękujemy za zakupienie tego produktu.  
Przed przystąpieniem do eksploatacji  
opisywanego produktu należy dokładnie  
przeczytać niniejsze zalecenia i zachować  
instrukcję obsługi do wglądu.

Děkujeme, že jste si zakoupil tento výrobek.  
Před použitím tohoto produktu si pečlivě  
přečtěte tyto pokyny a celý návod si uložte pro  
pozdější použití.

ENGLISH

POLSKI

ČESKY

# Safety precautions

## WARNING

### Unit

- To reduce the risk of fire, electric shock or product damage,
  - Do not expose this unit to rain, moisture, dripping or splashing.
  - Do not place objects filled with liquids, such as vases, on this unit.
  - Use only the recommended accessories.
  - Do not remove covers.
  - Do not repair this unit by yourself. Refer servicing to qualified service personnel.
- Do not let metal objects fall inside this unit.

 
### AC mains lead

- The mains plug is the disconnecting device. Install this unit so that the mains plug can be unplugged from the socket outlet immediately.

## CAUTION

### Unit

- To reduce the risk of fire, electric shock or product damage,
  - Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure this unit is well ventilated.
  - Do not obstruct this unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.
  - Do not place sources of naked flames, such as lighted candles, on this unit.
  - Do not expose this unit to direct sunlight, high temperatures, high humidity, and excessive vibration.
- This unit is intended for use in moderate climates.
- This unit may receive radio interference caused by mobile telephones during use. If such interference occurs, please increase separation between this unit and the mobile telephone.
- Do not allow children to climb on this unit.
- Do not stack anything on this unit.
- Place this unit on an even surface.
- Use caution when lifting the unit.
  - Lift it with more than one person if necessary.
- Do not touch the speaker cone's reverberating surfaces:
  - This may damage the speaker cone.
  - The speaker cone may be hot.
- Do not place your feet under the unit, or at its wheels' areas.
- Improper handling or transportation manner may cause the unit to fall, etc., resulting in damage and/or personal injury.
- Be careful when babies or children are near.

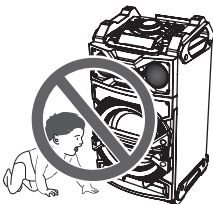

## Battery

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.
- Do not heat or expose to flame.
- Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
- Do not take apart or short circuit.
- Do not recharge alkaline or manganese batteries.
- Do not use the battery if the cover has peeled off.
- Remove the battery if you do not use the remote control for a long period of time. Keep in a cool, dark area.

## Caution for AC Mains Lead

### (For the AC mains plug of three pins)

For your safety, please read the following text carefully. This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

 
### Before use

Remove the connector cover.


### How to replace the fuse

The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below. Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

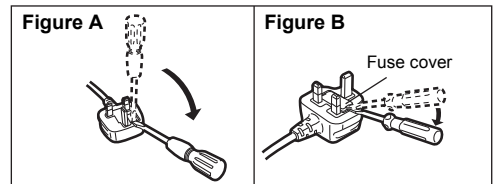

 2. Replace the fuse and close or attach the fuse cover.

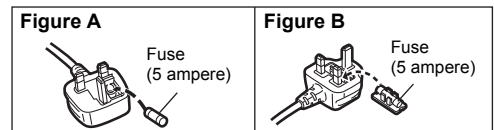

# Table of contents

Safety precautions.....	2
Caution for AC Mains Lead .....	2
Accessories.....	3
Audio sources .....	3
Licenses .....	3
Unit care .....	4
About Bluetooth® .....	4
Moving this unit .....	5
Control reference guide .....	6
Connecting to AC power supply .....	7
Connecting a USB device .....	8
Bluetooth® operations .....	8
Media playback controls .....	9
Sound and illumination effects.....	11
Recording (USB, AUX) .....	11
Clock and Timers .....	13
External equipment .....	14
Using a microphone or guitar.....	15
Others .....	16
Troubleshooting.....	17
Specifications.....	20

## About descriptions in these operating instructions

- Pages to be referred to are indicated as "→ ○○".
- Unless otherwise indicated, operations are described using the remote control.

# Accessories

Check the supplied accessories before using this unit.

- 2 x AC mains lead

**For the United Kingdom and Ireland**  
(K2CT2YY00097)

**For Continental Europe**  
(K2CQ2YY00119)

- 1 x Battery for remote control

- 1 x Remote control  
(N2QAYB001000)



- Please use the supplied AC mains lead suitable for the household mains socket.
- Do not use AC mains lead with other equipment.
- Product numbers provided in these operating instructions are correct as of May 2015. These may be subject to change.

# Audio sources

The following marks indicate the availability of the feature.

- USB**: USB devices containing MP3 files (→ below)
- Bluetooth**: Connected Bluetooth® device (→ 8)
- AUX**: External equipment connected to the AUX IN 1 or AUX IN 2 terminal (→ 14)

## Compatible USB devices

- This unit does not guarantee connection with all USB devices.
- FAT12, FAT16 and FAT32 file systems are supported.
- This unit supports USB 2.0 full speed.
- This unit can support USB devices of up to 32 GB.
- Only one memory card will be selected when connecting a multiport USB card reader, typically the first memory card inserted.

## Compatible MP3 files

- Supported format:  
Files with the extension ".mp3" or ".MP3".
- Depending on how you create the MP3 files, they may not play in the order you numbered them or may not play at all.
- Files are defined as tracks and folders are defined as albums.
- This system can play or record up to 800 albums (maximum 999 tracks in an album) or a total of 8000 tracks, depending on the available storage capacity.

# Licenses

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license. Other trademarks and trade names are those of their respective owners.

Google Play and Android are trademarks of Google Inc.

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!