

# LED DECORATION

ZY2146  
ZY2147  
ZY2148



 
 
<b>GB</b>	LED decoration
<b>CZ</b>	LED dekorace
<b>SK</b>	LED dekorácie
<b>PL</b>	Dekoracje LED
<b>HU</b>	LED-ES dekoráció
<b>SI</b>	LED okrasek
<b>RS HR BA ME</b>	Ukrasne LED lampice
<b>DE</b>	LED-Dekoration
<b>UA</b>	Світлодіодна декорація
<b>RO</b>	Decorațiuni LED
<b>LT</b>	LED dekoracija
<b>LV</b>	LED gaismu dekorācija
<b>EE</b>	LED dekoratsioon
<b>BG</b>	LED декорация



[www.emos.eu](http://www.emos.eu)

**Type / Typ / Typ / Typ / Típus / Nasvet / Tip  
/ Typ / тип / Tip / Tipos / Tips / Tüüp / Тип**

<b>LED DECORATION</b>	ZY2146	ZY2148
	ZY2147	



## **GB** LED decoration

### **Safety Instructions**

Do not under any circumstances put the device into operation while it is still in packaging! The product is designed for non-commercial use in the household. Like any electric device, the device must be kept out of reach of children.

Protect the product from falls or powerful shocks and vibrations. Do not open the product. Stop using the product if it becomes damaged. Immediately replace discharged batteries and dispose of them in accordance with valid regulations.

Do not modify the product in any way. Doing so voids the warranty. Children should be supervised by an adult to ensure they do not play with the device. Immediately dispose of packaging material in accordance with valid local regulations on waste disposal.

### **Warning - Batteries**

Always use batteries of the correct size and quality class that best fit the purpose. Make sure the batteries are inserted correctly and that polarity is taken into account (+ and -).

Do not bridge the batteries. Do not recharge the batteries. Do not throw the batteries into a fire. Keep the batteries out of reach of children. Do not allow children to replace the batteries unsupervised. Remove the batteries if the product will not be used for an extended period of time. Remove and dispose of used batteries.

### **Replacing Batteries**

The product must be turned off (button in the OFF position). Open the battery compartment on the bottom side of the candle. Insert batteries of the correct type (AA / AAA / CR2032) with the correct polarity.

Close the battery compartment.

### **Timer (T)**

#### **Three-position switch functions:**

OFF – turn off • TIMER – after turning on, the product lights up in repeated cycles daily for 6 hours, then turns off for 18 hours • ON – product remains

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!