


nedis

TVRC21SNBK Remote control

Specifications:

- Batteries:
2x AAA / LR03
(not incl.)

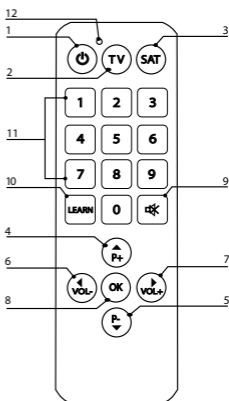

Description

English

1. On/off button	Press the button to switch the TV on or off.
2. TV button	Press this button to control the TV.
3. Satellite button	Press this button to control the set-top-box or other programmed devices.
4. Previous program button	Press the buttons to navigate through the programs.
5. Next program button	
6. Volume - button	Press the button to increase or decrease the volume.
7. Volume + button	
8. OK button	Press the button to confirm a selection.
9. Mute button	Press the button to mute the sound..
10. Learn button	In learn mode, press the button to activate the signal before copying functions from other remote controls.
11. Digit buttons	Press the buttons to select the channel.
12. LED indicator	The LED indicator shows the status of the device.

Use

Programming the remote control to the TV or another device

- Switch on the device to be programmed.
- Look for the brand of the TV that you want to program in the code list. Make a note of the first code in the list.
- Press and hold the TV or satellite button of the remote control until the LED indicator comes on.
- Enter the previously identified code.
Note: If the LED indicator goes off, it indicates that the code is accepted. If it switches on or off the TV, it indicates that the code is correct. If it does not switch on or off the TV, repeat from step 2 to try another code.

Auto search

- Switch on the device to be programmed.

2. Press and hold the tv or satellite button until the led indicator comes on
3. Point the remote control to the device. Press and slowly release the on/off button.
Note: If the device is switched off, it indicates that the code is found.
4. Immediately press the TV or satellite buttons to confirm the code.
5. Switch on the device again and check if the other buttons of the remote control function correctly.
Note: For buttons that do not function correctly, repeat the procedure until the correct code is found.

Copying functions from other remote controls

1. Press the TV or satellite button.
2. Press and hold the learn button until the LED indicator flashes rapidly.
3. Place the Nedis remote control within 2 cm from the other remote control.
4. On the Nedis remote control, press the button that you want to program until the LED indicator stays on.
5. Press and hold the button on the other remote control until the LED indicator flashes twice.
6. Repeat the procedure from step 4 to copy the functions for all buttons.
7. Press the learn button to save the settings and exit the programming mode.

Technical data

Battery type	AAA / LR03 (2x)
Battery life	± 2 years
Transmission range	8 m
Frequency	< 108 MHz
Operating temperature	0 °C ~ 40 °C
Relative humidity	10% ~ 80% (non-condensing)
Dimensions	17 x 5.5 x 2 cm

Safety



- To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
- Disconnect the product from the mains and other equipment if a problem should occur.
- Read the manual carefully before use. Keep the manual for future reference.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.

Battery safety

- Use only the batteries mentioned in the manual.
- Do not use old and new batteries together.
- Do not use batteries of different types or brands.
- Do not install batteries in reverse polarity.
- Do not short-circuit or disassemble the batteries.
- Do not expose the batteries to water.
- Do not expose the batteries to fire or excessive heat.
- Batteries are prone to leakage when fully discharged. To avoid damage to the product, remove the batteries when leaving the product unattended for longer

periods of time.

- If liquid from the batteries comes into contact with skin or clothing, immediately rinse with fresh water.

Cleaning and maintenance

Warning!

- Do not use cleaning solvents or abrasives.
- Do not clean the inside of the device.
- Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
- Clean the outside of the device using a soft, damp cloth.

Beschrijving

Nederlands

1. Aan/uit-knop	Druk op de knop om de TV in of uit te schakelen.
2. TV-knop	Druk op deze knop om de TV te bedienen.
3. Satellietknop	Druk op deze knop om de settopbox of andere geprogrammeerde apparaten te bedienen.
4. Vorig programma-knop	Druk op de knoppen om de programma's te doorlopen.
5. Volgend programma-knop	
6. Volume - knop	Druk op de knop om het volume te verhogen of the verlagen.
7. Volume + knop	
8. OK-knop	Druk op de knop om een keuze te bevestigen.
9. Dempknop	Druk op de knop om het geluid te dempen.
10. Inleerknop	Druk vanuit de inleermodus op de knop om het signaal te activeren voordat u functies van andere afstandsbedieningen gaat kopiëren.
11. Cijfertoetsen	Druk op de toetsen om het kanaal te kiezen.
12. LED-indicator	De LED-indicator toont de status van het apparaat.

Gebruik

De afstandsbediening voor de TV of een ander apparaat programmeren

1. Schakel het te programmeren apparaat in.
2. Zoek het merk van de te programmeren TV in de codelijst. Noteer de eerste code van de lijst.
3. Houd de TV-knop of satellietknop op de afstandsbediening ingedrukt tot de LED-indicator gaat branden.
4. Voer de eerder genoteerde code in.
Opmerking: Als de LED-indicator uitgaat, betekent dit dat de code is geaccepteerd. Als de TV in- of uitschakelt, betekent dit dat de code correct is. Herhaal als de TV niet in- of uitschakelt de procedure vanaf stap 2 en probeer een andere code.

Automatisch zoeken

1. Schakel het te programmeren apparaat in.
2. Houd de TV-knop of satellietknop ingedrukt tot de LED-indicator gaat branden.
3. Richt de afstandsbediening op het apparaat. Druk de

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!