


DAEWOO

VACUUM CLEANER

RC-105

OWNER'S
MANUAL

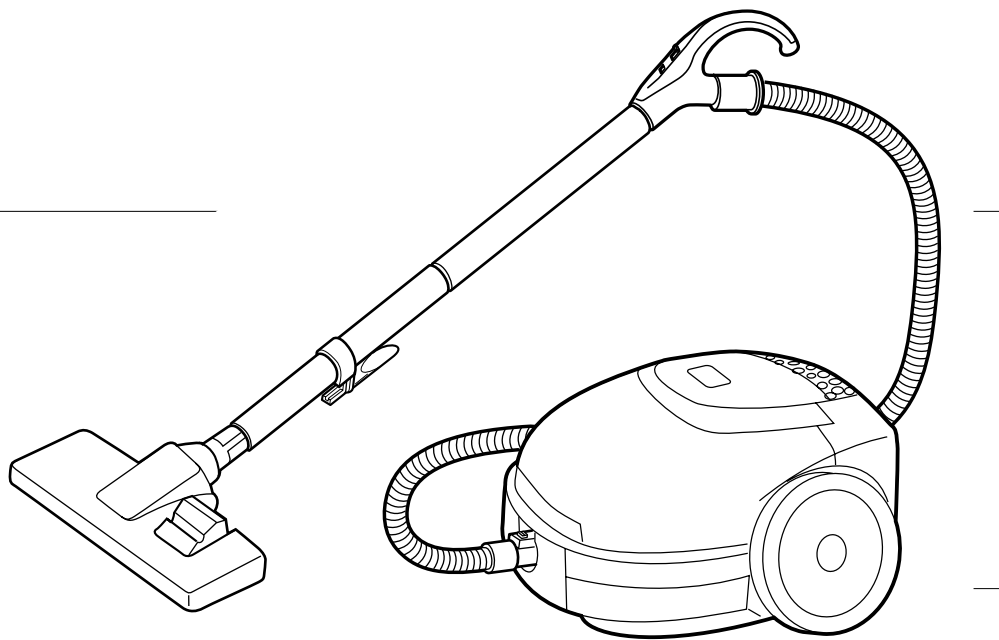


READ AND KEEP THIS

- Thank you for purchasing this vacuum cleaner.
- For proper operation, please read this manual carefully before using.

CONTENTS








Description.....3
Precautions for safe use.....4
How to use5
Before asking for service.....9

Description

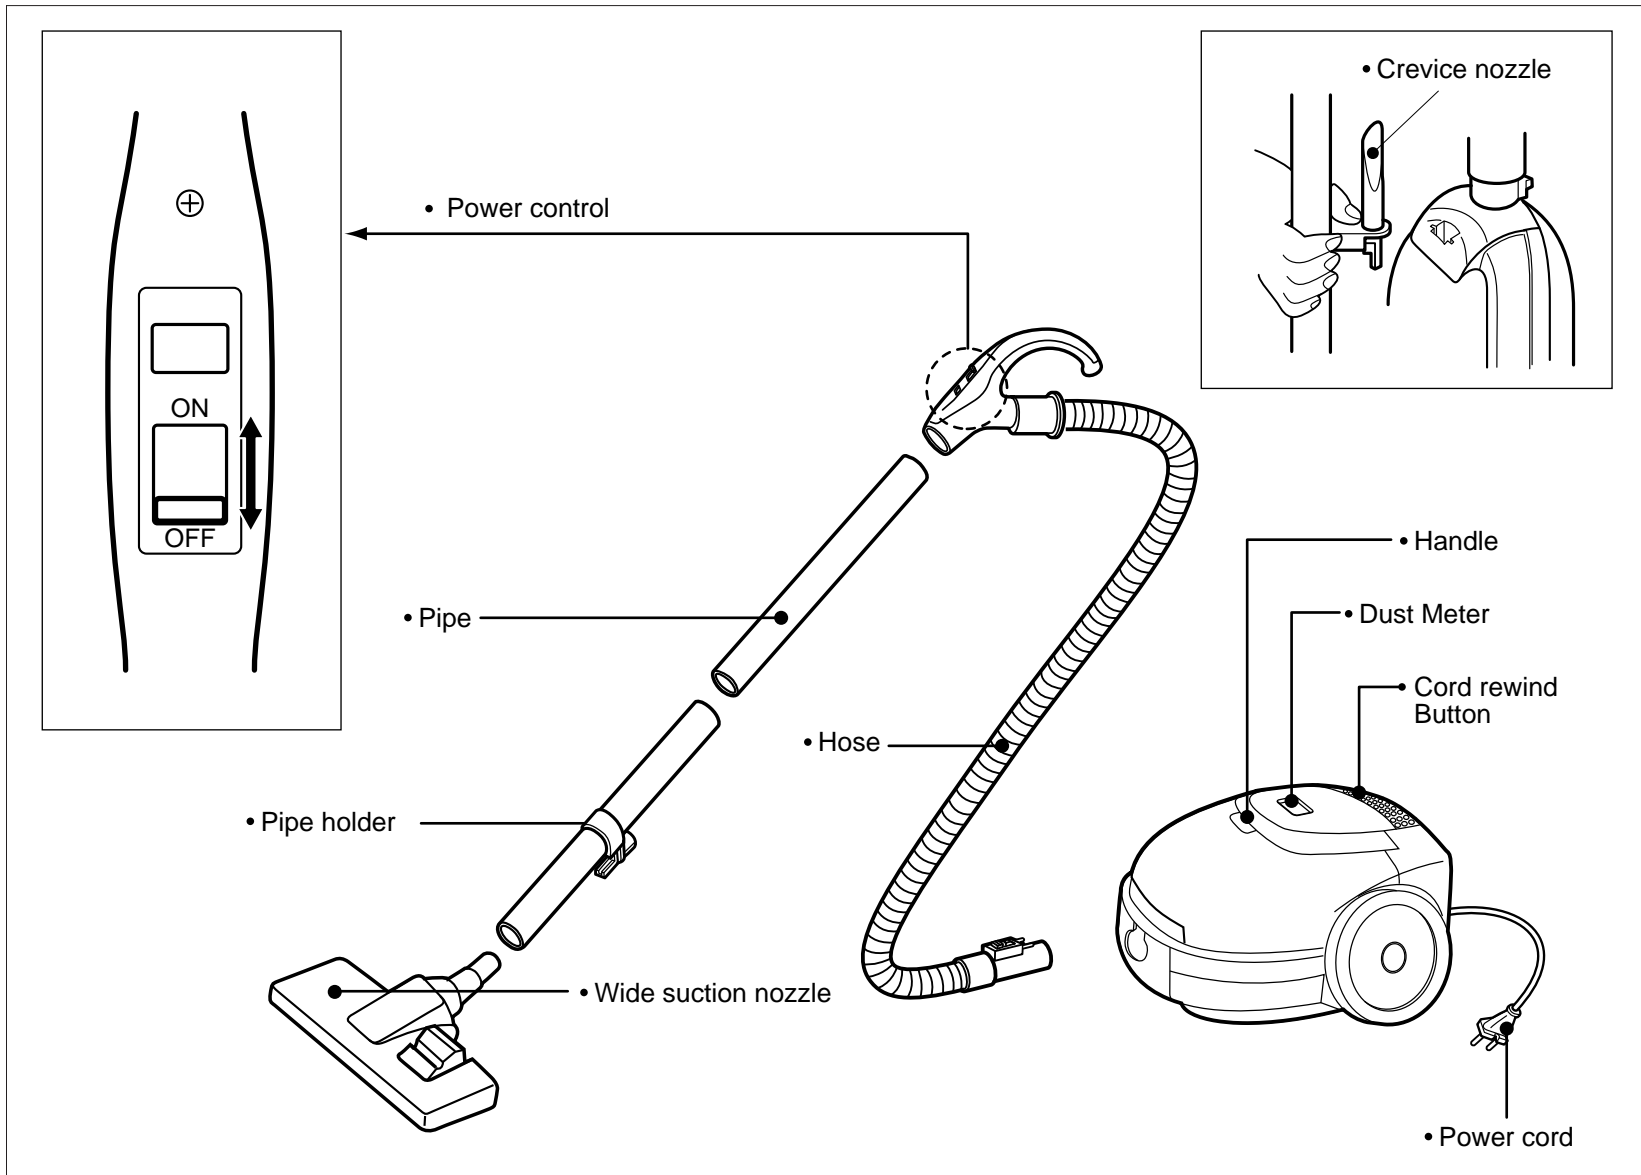

Precautions for Safe Use

<ul style="list-style-type: none">• Plug the power cord into a 120V AC 60Hz receptacle outlet. When plugging or unplugging, hold the plug body, not flex.	<ul style="list-style-type: none">• Do not vacuum inflammable materials, needles, pins, razor blades, etc.
<ul style="list-style-type: none">• Do not vacuum without a dust bag. If no dust bag, the dust cover would not be closed completely.	<ul style="list-style-type: none">• Keep the unit away from heat sources such as a heater.
<ul style="list-style-type: none">• Do not step on the hose or pull it forcibly. The hose may be flattened or torn.	<ul style="list-style-type: none">• This product is provided with a cable which, if damaged, must be replaced by a repair shop authorized by the manufacturer since special tools are required.
<ul style="list-style-type: none">• Do not vacuum dust which contains moisture/water.	<ul style="list-style-type: none">• When rewinding the power cord, hold the plug body before pressing the cord rewind button. The cord moves quickly and might hit you or other objects.

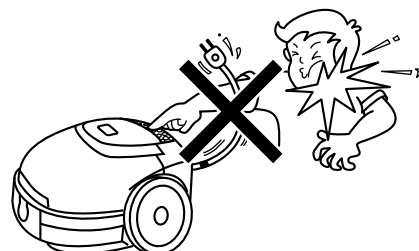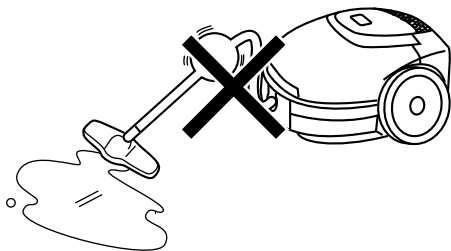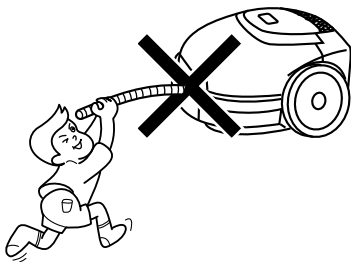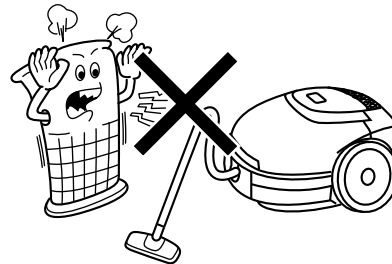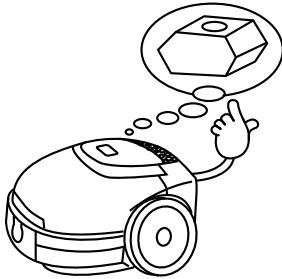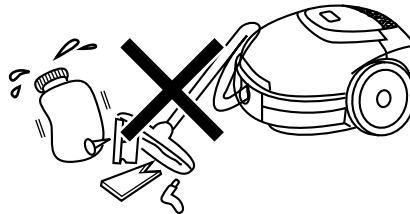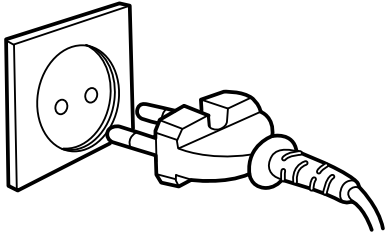


How to Use

1. How to operate


- Put together as shown on page 3. Description.
- Plug the power cord into a 120V AC 60Hz ; receptacle outlet.
- Set the remote control switch "ON".
- O the vacuum cleaner will be vacuuming at this time.
- If you continue to push the remote control switch, the air hole opens and the suction power decreases.
- O adjust the switch as needed for different cleaning jobs.

(How to operate the remote control switch)

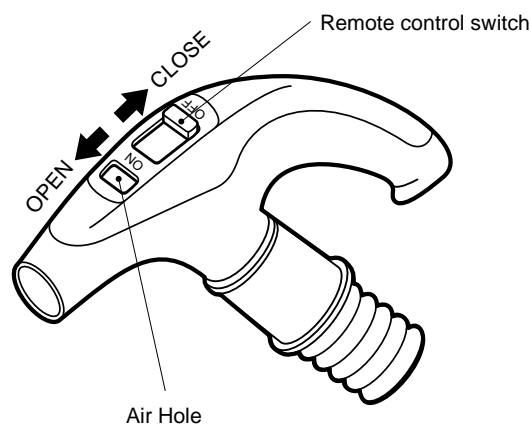


2. How to change the dust bag.

- Open the cover.

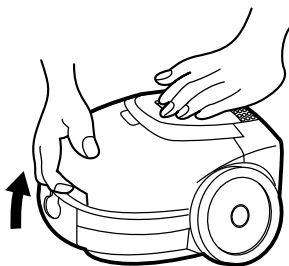


- Push the bag holder to the arrow mark, and then take the dust bag out.

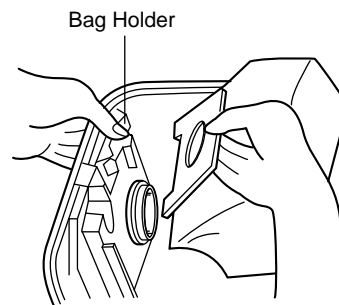


5. How to use the crevice nozzle

- Cleaning window frames or narrow spaces between furnitures, walls, and floor.

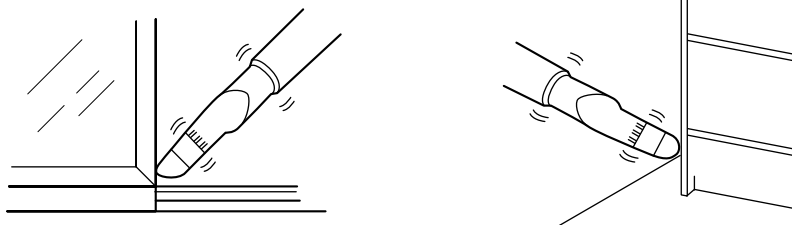


- Cleaning curtains, sofa or something like that.

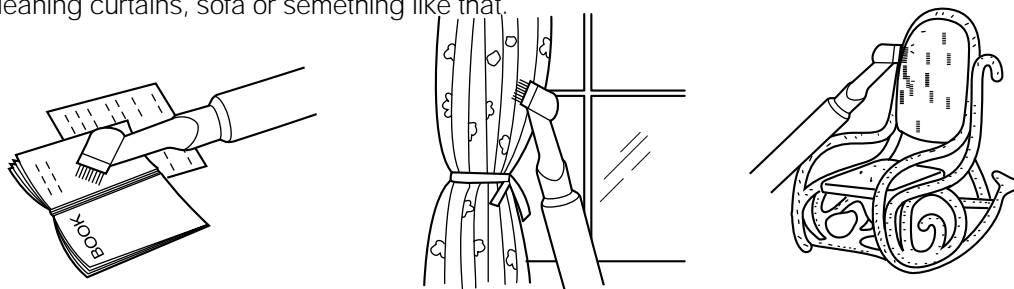


6. How to clean the filter.

- Open the cover.
- Please pull out the plug before cleaning.

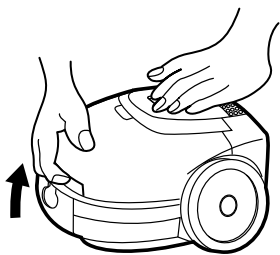


- Pull the filter out from the unit while lifting the gasket.

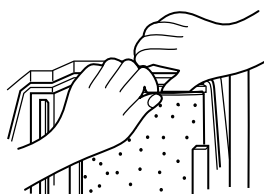

- After washing the filter with water, dry it completely.




- Insert it again originally.

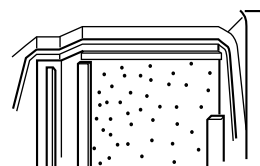


7. How to store the vacuum cleaner

- Put the pipe holder on the groove of the cleaner body.

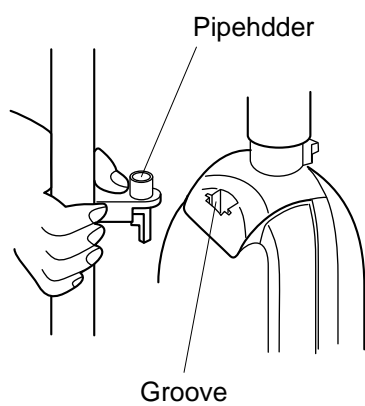

- Wind the hose around the hose handle as shown below.

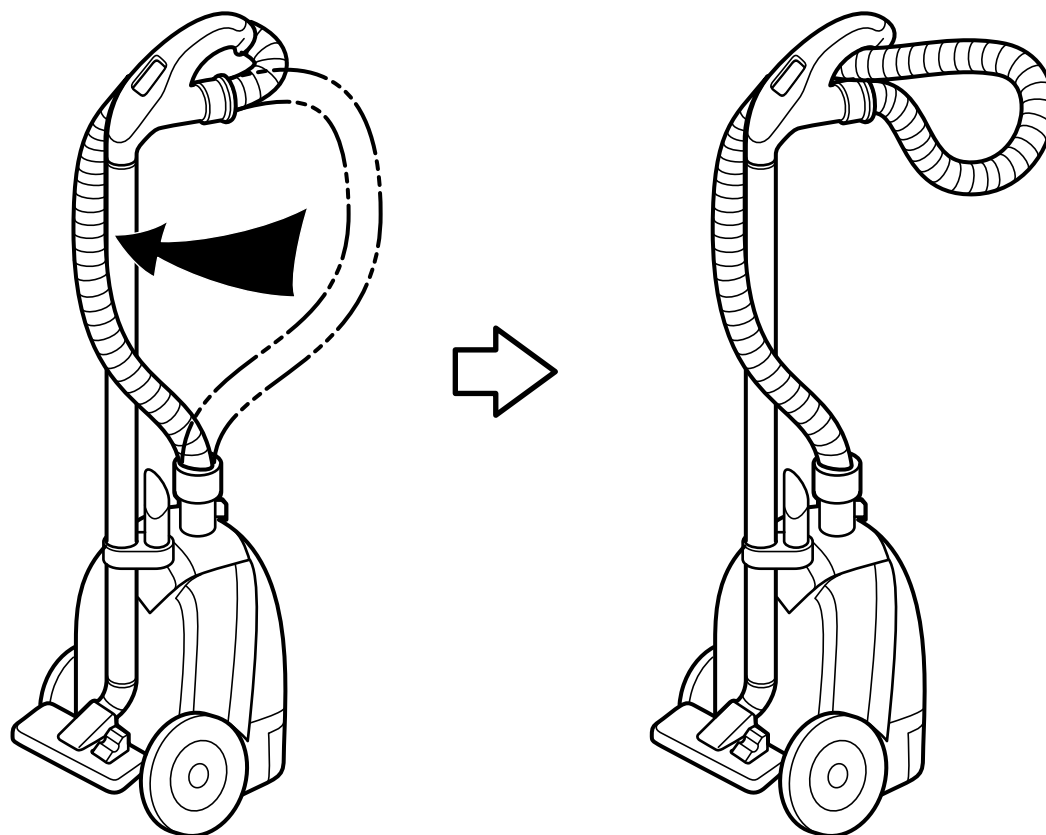

Before Asking for Service

■ Before Asking for Service, please check each item below if you have trouble with your cleaner.

Problem	Check Point	Measure
Suction power is weak.	<ul style="list-style-type: none">• Dust bag• Pipe or hose	If dust bag is dirty, clean it. If clogged or blocked, remove the object.
The cleaner does not work.	<ul style="list-style-type: none">• Power cord• Suction hose	Check if power cord is plugged. Check if hose is attached firmly into suction hole.
Power cord does not rewind.	<ul style="list-style-type: none">• Power cord	Pull the power cord out a little and press the cord rewind button.
When the dust bag is full or blocked or any of the accessories is blocked, the over-heating protection for the motor is activated.		Switch off and unplug the cleaner and check the dust bag, accessories and blockages, then allow the motor to cool down. The cleaner can be switched on again about 30 minutes.