

# LED DECORATION

**ZY2141**

**ZY2142**

**ZY2143**

**ZY2144**


<b>GB</b>	LED decoration
<b>CZ</b>	LED dekorace
<b>SK</b>	LED dekorácie
<b>PL</b>	Dekoracje LED
<b>HU</b>	LED-ES dekoráció
<b>SI</b>	LED okrasek
<b>RS HR BA ME</b>	Ukrasne LED lampice
<b>DE</b>	LED-Dekoration
<b>UA</b>	Світлодіодна декорація
<b>RO</b>	Decorațiuni LED
<b>LT</b>	LED dekoracija
<b>LV</b>	LED gaismu dekorācija
<b>EE</b>	LED dekoratsioon
<b>BG</b>	LED декорация



[www.emos.eu](http://www.emos.eu)

# Type / Typ / Typ / Typ / Típus / Nasvet / Tip / Typ / тип / Tip / Tipas / Tips / Tüüp / Тип

<b>LED DECORATION</b>	ZY2141	ZY2143
	ZY2142	ZY2144

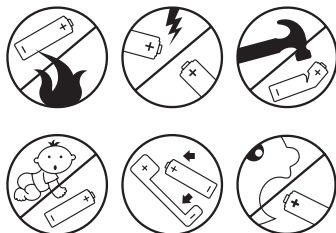

## **GB** LED decoration

### **Safety Instructions**

Do not under any circumstances put the device into operation while it is still in packaging! The product is designed for non-commercial use in the household. Like any electric device, the device must be kept out of reach of children.

Protect the product from falls or powerful shocks and vibrations. Do not open the product. Stop using the product if it becomes damaged. Immediately replace discharged batteries and dispose of them in accordance with valid regulations.

Do not modify the product in any way. Doing so voids the warranty. Children should be supervised by an adult to ensure they do not play with the device. Immediately dispose of packaging material in accordance with valid local regulations on waste disposal.

### **Warning – Batteries**

Always use batteries of the correct size and quality class that best fit the purpose. Make sure the batteries are inserted correctly and that polarity is taken into account (+ and -).

Do not bridge the batteries. Do not recharge the batteries. Do not throw the batteries into a fire. Keep the batteries out of reach of children. Do not allow children to replace the batteries unsupervised. Remove the batteries if the product will not be used for an extended period of time. Remove and dispose of used batteries.

## Replacing batteries

The product must be turned off (button in the OFF position). Open the battery compartment on the bottom side of the candle. Insert batteries of the correct type (AA / AAA / CR2032) with the correct polarity. Close the battery compartment.

LED candles can be switched on and off with the remote controller

- ON – turn on
- OFF – turn
- TIMER 6H – Timer



Emos spol s.r.o. declares that the LED Candle with Remote Controller is in compliance with the essential requirements and other relevant provisions of Directive. The device can be freely operated in the EU. The Declaration of Conformity can be found at <http://www.emos.eu/download>.



Do not dispose with domestic waste. Use special collection points for sorted waste. Contact local authorities for information about collection points. If the electronic devices would be disposed on landfill, dangerous substances may reach groundwater and subsequently food chain, where it could affect human health.

## CZ LED dekorace

### Bezpečnostní pokyny

Produkt nikdy neuvádějte do provozu v balení! Výrobek je určen k nekomerčnímu použití v domácnosti. Výrobek nepatří do rukou dětem, stejně jako i všechny elektrické přístroje.

Výrobek chraňte před pádem a velkými otřesy. Výrobek neotvírejte a v případě poškození již dále nepoužívejte. Vybívané baterie bez odkladu vyměňte a zlikvidujte dle platných předpisů.

Výrobek žádným způsobem neupravujte, ztratíte tím nárok na záruku. Děti by měly být pod dozorem dospělé osoby, aby si s přístrojem nehrály. Obalový materiál likvidujte ihned podle platných místních předpisů o likvidaci.

### Varování – baterie

Používejte vždy správnou velikost a jakostní třídu baterií, které se ke stanovenému účelu nejlépe hodí. Ujistěte se, že jsou baterie vloženy správně a že je zohledněna polarita (+ a -). Baterie nepřemostujte. Baterie nenabíjejte. Baterie nevhazujte do ohně. Baterie uchovávejte mimo dosah dětí. Nedovolte dětem provádět výměnu baterií bez dozoru. Vyjměte baterie, pokud se výrobek nebude delší dobu používat. Použité baterie odstraňte a zlikvidujte.

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!